
Guias batente / tapeta Lateral / Guide latéral / Shock Absorber Plug

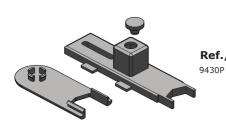

Série / Serie / System


N25000 - PERIMETRAL


Ref./Code Espec. / Caract. / Spec.

PA6-PVC 55 SHORE A Guias Batente / Tapeta Lateral / Guide latéral / Shock Absorber



QTY / GR 150 8750

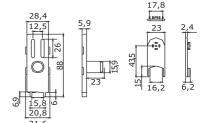

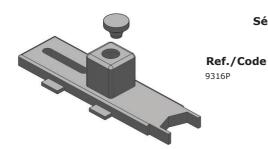

Série / Serie / Série / System

PR-60


Espec. / Caract. / Spec.


PA6-PVC 55 SHORE A Guias Batente / Tapeta Lateral / Guide latéral / Shock Absorber



QTY / GR

200 8280



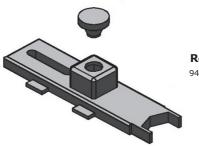

Série / Serie / System


PR-60 + BAIXO




Ref./Code

9416P

Espec. / Caract. / Spec. PA6-PVC 55 SHORE A Guias Batente / Tapeta Lateral / Guide latéral / Shock Absorber QTY / GR 200 7720



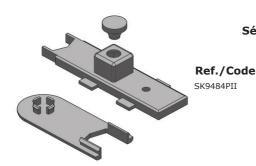

Série / Serie / System

RTC


SK9484PII


Espec. / Caract. / Spec.

PA6-PVC 55 SHORE A Guias Batente / Tapeta Lateral / Guide latéral / Shock Absorber

QTY / GR

200 6500

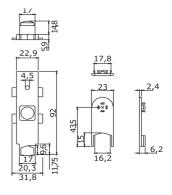

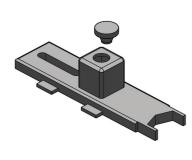

Série / Serie / Série / System

TC4000

Ref./Code SK9488PII

Espec. / Caract. / Spec.

PA6-PVC 55 SHORE A Guias Batente / Tapeta Lateral / Guide latéral / Shock Absorber



QTY / GR 200 9070

